



UNIT 6 DRAKE COURT, BRITANNIA PARK, MIDDLESBROUGH, TS2 1RS
TEL: 01642 232880 FAX: 01642 232870
Email: sales@javac.co.uk

INSTALLATION AND OPERATING INSTRUCTIONS

Models : Econovac II Vacuum Pump

Introduction

Unpacking

Make sure the packaging is not damaged. In the event of damage you must advise the forwarder and Javac in writing immediately. Failure to do so could result in a failed claim.

Before Use

Before using the machine carefully read the instructions.

The manufacturer does not take any responsibility for the negligence and the misuse of this vacuum pump.

General and Accident Prevention

Do not touch the machine with wet hands.

In case of breakdown or malfunction, switch off the machine and unplug it.

Do not leave the machine exposed to atmospheric agents; do not put it in water.

Only qualified personnel should use this equipment.

Always unplug the machine before changing applications.

When the machine is not used, switch off the machine and unplug it.

Usage

Connect the machine via the plug to a 230V socket.

Fit the vacuum hose from the process to the inlet port of the machine. When fitting tubing, ensure the inlet bore of the tubing is not smaller than the inlet bore of the pump.

Switch on the machine by pushing the on/off switch to the ON position

Specifications

Bodywork	ABS
Machine Size	mm.240X185X102H
Power Grid Voltage:	230Volt, 50Hz
Motor Power:	80 Watt
Machine weight:	1.8kg
Flow Rate:	12 Litres/Min
Vacuum:	250 mbar Absolute